AASKIN
Smart Life Simplified



WIFI DOOR SENSOR

OPERATING MANUAL

Kindly review the complete operating manual in detail before setting up the device

Open / Close Alert

Retrofit Design

Wi-Fi Inbuilt

Low Power Consumption

Workflow And Scene Activation

SAFETY PRECAUTION AND PREREQUISITES

- Ensure that the steps mentioned in the installation guide are abided by throughout the installation process.
- Do not modify the device unless recommended by the technician sent by the manufacturer.
- Do not operate with wet or moist hands as it may cause electrocution.
- The device should be placed in a dry area, away from moisture & water.

ABOUT WIFI DOOR SENSOR


The Aaskin Smart WiFi Door Sensor is designed to passively monitor any entrance into your property by easily attaching to any door or window. The sensor easily connects to your home Wi-Fi and in the event that the door or window is opened the alarm will instantly alert you on the Aaskin Smart App.
Easy to create workflows so you can set to automatically turn on the lights or the fan, even set AC to a particular temperature if the door is opened at a particular time.

FEATURES

Retrofit Design: Designed to blend in with the present interiors near the strip lights.
Robust Hardware: Advanced firmware and rugged hardware design for long-lasting performance.
Alerts: Get alerted whenever the door or window is opened. .
Workflow And Scenes: Easy to create workflows so you can decide what should happen if the door is opened at a particular time.
Long Battery Life: Battery can last over a year if used around 7 times a day.

TECHNICAL SPECIFICATIONS

Detection: Open/close of the door or window
Battery: CR2 x 1
Standby Time: 1 year
Standby Current: 13uA
Wireless Type: 2.4 GHz
Protocol: IEEE 802.11/b/g/n
Wireless Distance: 45m
Operating Temperature: 0°C ~ 60°C
Main Body Dimensions: 71mm x 21mm x 22mm
Deputy Body Dimensions: 40mm x 11mm x 11mm

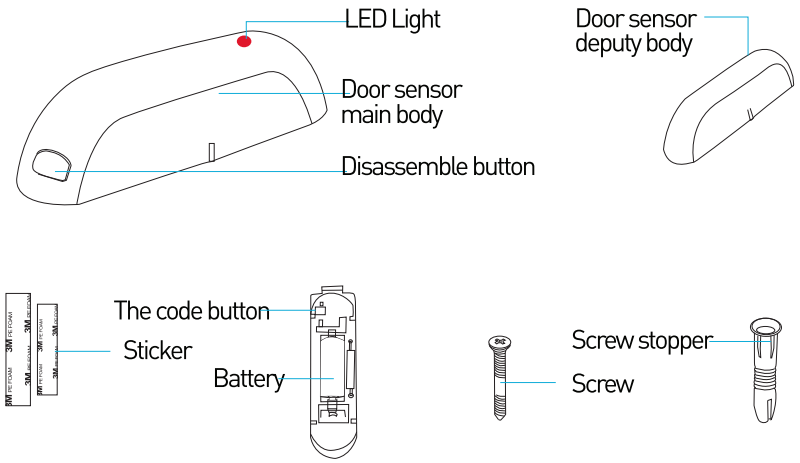

CONFIGURE WIFI DOOR SENSOR TO THE MOBILE APP

It is mandatory to use a Wi-Fi router to configure the device.
If you are using mobile data, turn it off and switch to Wi-Fi.
Ensure that you are following the steps for configuration, in the same sequence, mentioned in the operating manual.

Step 1

- Download the **APP**.
- The app is available in Google Play and Apple's App Store.
- Create an account and log in.

Step 2

- Once logged in, set up your '**HOME**' by clicking on the '**NEW HOME**' button.
- If you have already created a '**HOME**', skip to '**Step 3**'.
- To create a home, pick a name and location and click on '**CREATE HOME**'.
- There are two ways to provide '**HOME**' access to your family members and relatives.
- 1. Go to **SETTINGS>HOMES>MY HOME>USERS**. When you tap on users, you get an option to add a user. Enter the email ID or phone number of the family member to Provide them with the access.
- 2. Ask your family members to '**JOIN HOME**' when they are creating an account. It allows them to send you a request to add them as a user by entering your email ID or phone number. As a request arrives at your phone or email, you can provide them with access once approved.

Step 3

- To set-up the switch device, Go to '**SETTINGS > DEVICES**'
- Tap on the **+** button
- Out of the products list, select '**SENSOR > DOOR SENSOR**' and tap on '**NEXT**'.
- Now remove the back case of those sensor and remove the flap between the battery and the switch. Also ensure the device is on reset (by default it will be in reser mode ie, red light will be blinking) > tap on **NEXT**.

Step 4

- Ensure that the mobile data is disconnected.
- To connect your mobile to the device's hotpsot, tap on the **'GO TO WIFI SETTINGS'** shown on the bottom of your mobile screen.

- When connected with your Wi-Fi, press the Reset button for 6 seconds, the LED will blink slowly. The device will go to AP mode.
- Click on the ‘**AP MODE**’.
- Now find and select the device wi-fi -**’door_sensor_******’** in the wi-fi network list.
- Go to the APP (Note: do not minimize, instead just press back), you will find options to connect to your home wi-fi from the app, select and enter the Password > Confirm Password and wait fro the notification **“CONFIGURATION DONE!”**. Tap on **NEXT**.
- Now name your device and assign to room> tap on Create Device.
- You will recieve a notification **“SUCCESS!”**.

DELETING A DEVICE

- To remove the device from your list of devices.
- Go to **Settings > Devices**, select the device you want to remove and at the bottom of the device information, you get an option to **'Delete Device'**.

FACTORY RESET

- To reset the device, press the Reset button for 6 seconds, the LED will blink slowly. The device is in Smart WiFi mode.
- Press the Reset button again, the indicator will blink slowly. The device will go to ‘**AP Mode**’.

DISCLAIMER

- In case the device is not working within the warranty period, and the user modified the product without prior notice, the device is not applicable under warranty services.

Devices labelled with this symbol should not be disposed of with other household wastes. It shall be handed over to the applicable collection point for the recycling of waste electrical and electronic equipment.

Works Well With

Alexa | Google Assistant | Siri | Google Home

Available on the App Store

GET IT ON Google Play

Designed And Manufactured By
AASKIN AUTOMATION PVT LTD
www.aaskin.in

Customer Support
Email: support@aaskin.in
Call: 0824 350 1133

Designed By Qapfy.com